




KEYLESS360 USER INSTRUCTIONS

TO LOCK

1. Close the door
2. Make sure knob is pointing up to  then set any 2 digit alphanumeric code.
3. Turn knob to 
4. Scramble the dials.

TO UNLOCK

1. Re-enter your code.
2. Turn the knob to 
3. Open the door.
4. Scramble the dials for next user.



See how it works: www.keyless.Co/instructions/keyless360

KEYLESS360.CO

Notice: Please do not bring valuables into the club. The club is not responsible for loss, theft or damage to a member's or guest's personal property.