


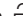


KEYLESS360 USER INSTRUCTIONS

TO LOCK

1. Close the door.
2. Make sure knob is pointing up to , then set any 2-digit code.
3. Turn knob to .
4. Scramble the dials.

TO UNLOCK

1. Re-enter your code.
2. Turn the knob up to .
3. Open the door.
4. Keeping the knob facing , scramble the dials for the next user.



MANAGERS

EMERGENCY REMOVAL:

www.keyless.co/keyless360/emergency



See how it works:

www.keyless.co/keyless360/instructions/user



KEYLESS.CO

Notice: Please do not bring valuables into the club. The club is not responsible for loss, theft, or damage to a member's or guest's personal property.