



# KEYLESSH3 Installation Instructions

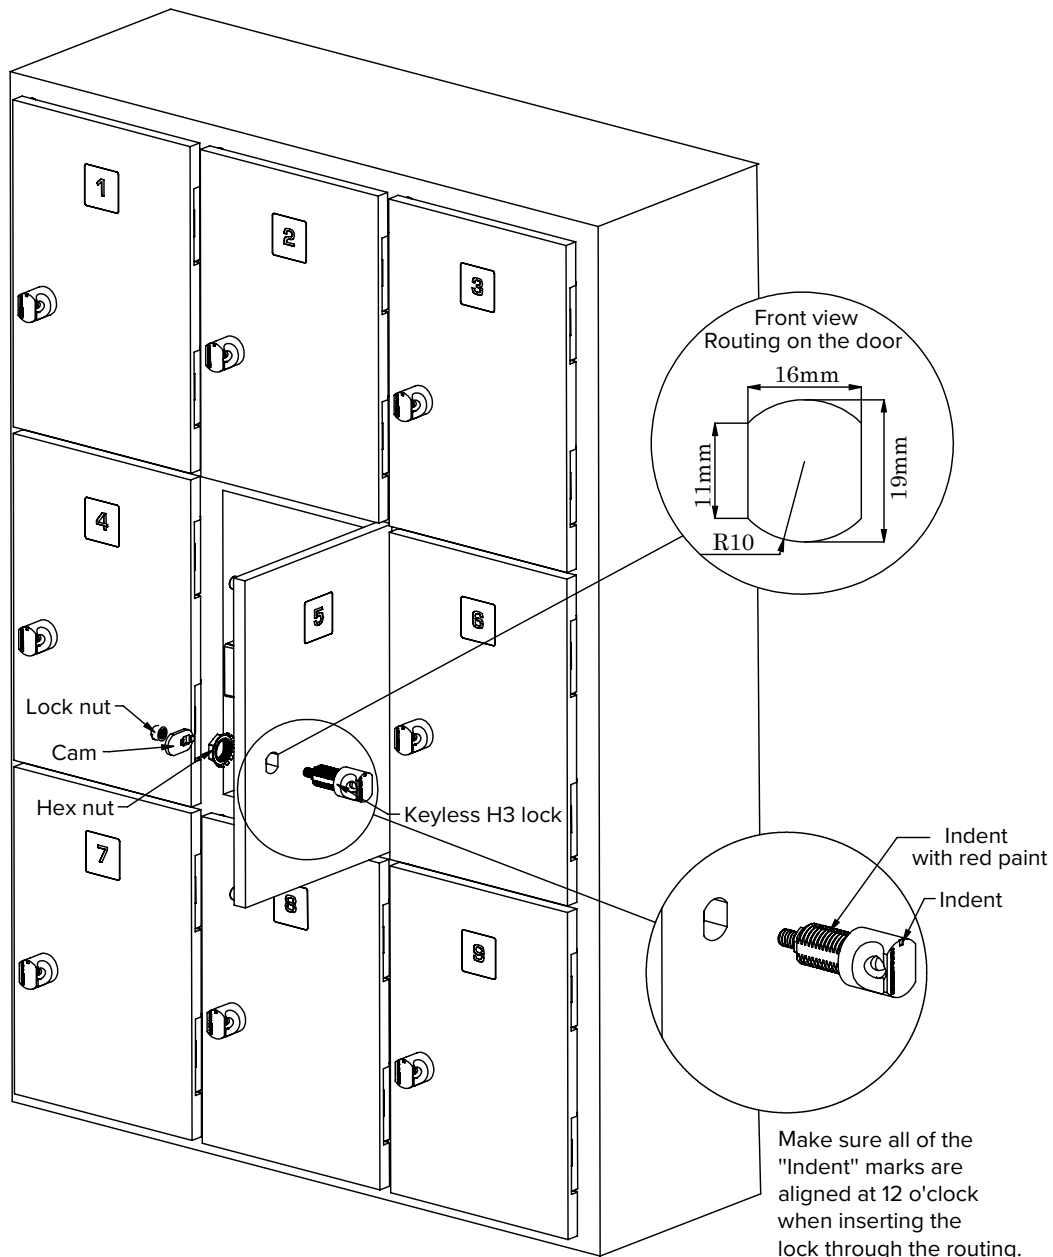


Make sure all of the "Indent" marks are aligned at 12 o'clock when inserting the lock through the routing.

1

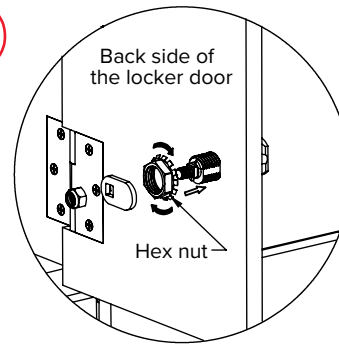


Insert the lock through door routing followed by the hex nut. Tighten the hex nut clockwise and make sure it is securely fastened.

2

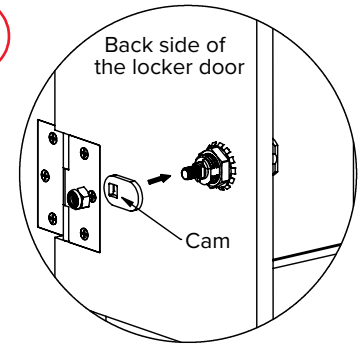

Insert the cam through the cylinder bolt and make sure the cam is facing towards the edge of the door.

3

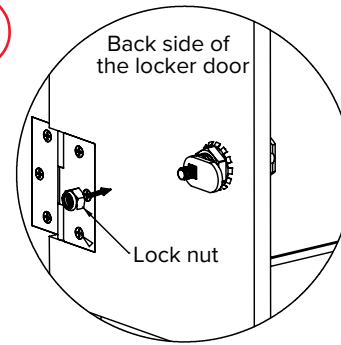

Place the lock nut, tighten the lock nut clockwise and make sure it is securely fastened but not too tight.

## Test the lock after installation

